

Introduction

Thank you for choosing Behringer, the world's leading manufacturer of Pipe and Tube supports. Behringer has been manufacturing pipe clamps and support systems for over 30 years, and has developed a reputation in the industrial and sanitary markets that is second to none. We have made developments and product improvements over the years both strengthening and broadening our product offering. This is evident in the breadth of our line and ability to accommodate new applications and designs. You can count on Behringer for all your clamping and support requirements.

Product

Behringer Hygienic Tube Supports are designed to meet the high demands of process piping in hygienic service applications. The automatic slope adjustment feature of the CH Series Dynamic hanger will promote drainability of the piping without imparting unnecessary stress into the piping. Drainability is a critical design feature in hygienic process piping. Behringer Sanitary Pipe and Tube Supports are available in a wide range of sizes and configurations and are offered with both an anchor or guide insert to meet the needs of any application.

Behringer offers many different series and within each series there are many different configurations available. We offer options for mounting such as welding, bolting, rail and strut mounting, double, and group mounting, etc. Behringer always welcomes a challenge, and would be happy to work with you to design a product that is custom-tailored to your application. This is where many of our developments are first generated, and helps to further progress the complexity of our product. Challenge us with your requirements.

Guarantee

Behringer Corporation, hereinafter called the "MANUFACTURER", guarantees that this product shall be free from defects in workmanship and materials. THIS GUARANTEE IS IN LIEU OF ALL OTHER GUARANTEES EITHER EXPRESSED OR IMPLIED, INCLUDING GUARANTEES FOR FITNESSFOR PURPOSE INTENDED. The MANUFACTURER'S liability is limited to the replacement of any materials which, after inspection by the MANUFACTURER at it's sole option, are found to be defective. The MANUFACTURER will honor only those claims that are presented to it within one hundred eighty (180) days of the delivery of the materials to the purchaser. The MAN-UFACTURER SPECIFICALLY DISCLAIMS ANY AND ALL LIA-BILITY FOR CONSEQUENTIAL DAMAGES. The MANUFAC-TURER shall not be liable for any damages which arise out of the misuse or abuse of the products.

Applications

Behringer clamps are used in may different types of applications ranging from low pressure lubrication and water systems to high pressure hydraulic and process systems. Anywhere that there are pipes, tubes, or hoses is a viable application for Behringer clamps. Behringer clamps are used in the following markets and applications most frequently:

- Mobile Equipment Mining Equipment Offshore and Marine Applications Shipbuilding Instrumentation Nuclear General Construction Electrical / Mechanical Contracting Process Piping Pharmaceutical / Biotechnology Food and Dairy Beverage
- Power Generation Pulp and Paper Industrial Hydraulics Power Units Agricultural Equipment OEM Machinery

Assistance

Behringer Corporation has a competent and highly skilled staff of inside sales and customer service personnel available to assist you with any of your needs. Behringer can be reached in the following ways:

Post Mail:	Behringer Corporation
	17 Ridge Road
	Branchville, NJ 07826
Telephone:	+1 (973) 948-0226
Fax:	+1 (973) 948-2562
Email:	cserv@behringersystems.com


Our regular business hours are Monday through Friday, 8AM - 5 PM Eastern Time. For after-hours service, please contact your regional sales manager.

Please Read

The information contained in this document is provided as an aid in properly selecting products and/or options. It is intended to be used by technically experienced users for general reference only. The supplier assumes no responsibility or liability for the accuracy or completeness of this document, as well as results obtained by the use of this information. Due to the variety of possible operating conditions, it is highly recommended that the user make their own tests to determine the safety and suitability of all products and combinations thereof. The user is solely responsible for final determination of such conditions.

CH SERIES HAS ALL YOUR ANGLES COVERED...

Compact Hygienic CH Series Hangers

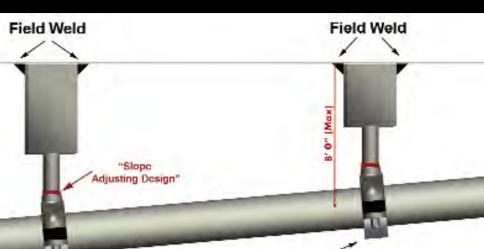

--- Fig. 225 CH

The innovative CH Series hangers design was developed with the input of engineers, contractors, end users and Behringer's strong understanding of hygienic tube and pipe applications. These compact High Purity hangers answer industry concerns, while incorporating several contractor time-saving benefits. The tension ring connection on the Dynamic Hanger allows the clamp bodies to self adjust, independent of the hanging rod, to the tube's slope. This attribute reduces internal stress on the tube, as well as, eliminating an entire step during slope adjustment. The ability to make these adjustments, while the hanger is secured to the tubing, eliminates the step of retesting the slope after the hangers have been mounted. The combined use of the CH, CHT, CHR & CHW supports along with the telescoping stanchions permits line adjustment in the x, y and z axis's. What could prove to be biggest saver is these are packaged and installed as a one piece unit. No loose parts and wasted time gathering pieces and assembling components on ladders and space restricted areas. These benefits ultimately create a quality job.

_Fig. 226 CH

TRNAB

PHONE: 973>948>0226

"Rigid

6" (Max)

Design

Field Weld Fig. 221

CHR

88

New Items & Accessories





Table of Contents



CH Series

Stanchions

Fig. 221

- CH Dynamic Mount Hanger
- CHR Rigid Mount Hanger
- CHW Weld Plate Mount Support
- CHT Threaded Mount Hanger
- Fig. 245 Threaded Support Rod

Fig. 224 - CH Series Rod Stand Plate



Fig. 223 - Telescopic Adjusting Round Floor Mount Stand

Fig. 225 - Telescopic Adjusting Stanchion - Hang Mount

Fig. 226 - Telescopic Adjusting Stanchion - Floor Mount







Page 13

Page 14

Pages 4 - 5

Pages 6 - 7 Pages 8 - 9

Page 12

Pages 10 - 11

- Page 15
- Page 16

Smooth Bore Series

Fig. 200 - Smooth Bore Weld Plate Mount	Page 19
Fig. 201 - Smooth Bore Hang Plate Mount	Page 20
Fig. 202 - Smooth Bore Base Plate Mount	Page 21
Fig. 203 - Smooth Bore RAL-1 Rail Mounting	Page 22
Fig. 204 - Smooth Bore Stacking Kit	Page 23
Fig. 211 - Smooth Bore Unistrut Mount	Page 24
Fig. 221 - Smooth Bore Rod Mount	Page 25

Miscellaneous

Technical Data Material Properties, Slope Conversion Chart, Shear Force Diagram Page 26-30

Catalog CHSAN1114



Automatic Slope Adjustment

Tension Ring connection allows hanger body to adjust 7" to tube slope and rotate 360" to relieve all unnecessary stresses between tube and CH support

Telescopic > Elevation Adjustment

CH Series with Stanchion allows for quick x, and z axis adjustment for ease in locating tube s direction, elevation and slope.




One Piece unit

Assembled as a one piece unit. No loose parts, quick identification and swift installation. Acorn bolt and plastics are captive to the CH Housing. (except in Group 9)


Lot Traceabiity


Behringer has lot traceability and material identification for all stainless steel products. (exact locations will vary)

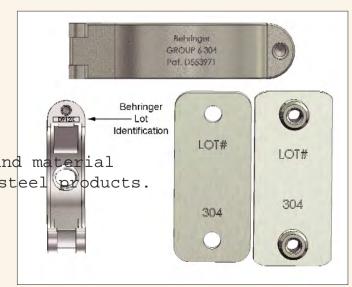

2

Example Ordering Guide

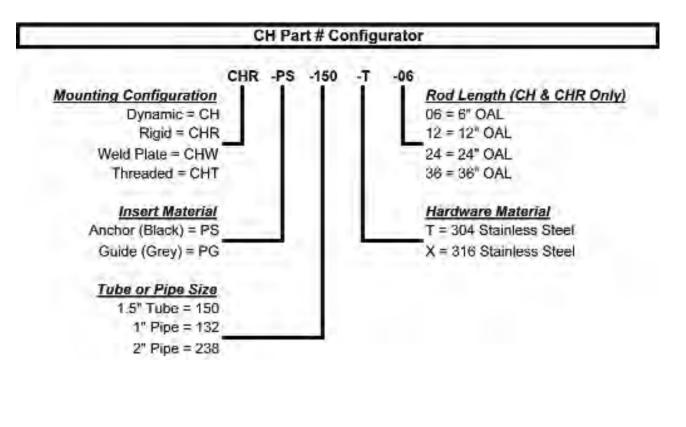

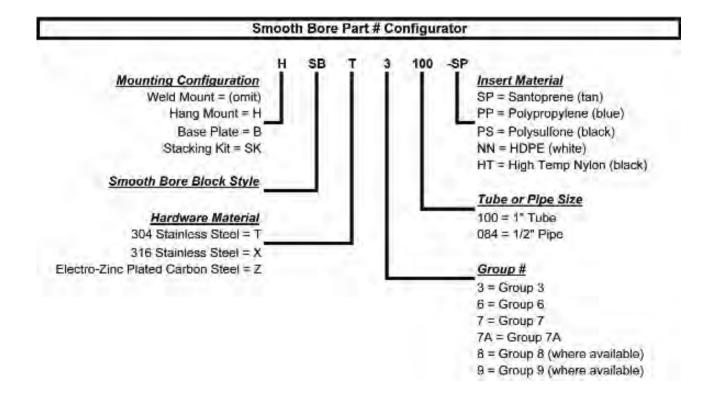



BEHRINGER

FIG. 221 CH

Dynamic M ount Hanger

Dynamic "Anchor or Guide" Slope Adjusting Hanger / Rod Mount Unit

One piece unit with attached dynamic rod. Hanger rods are available in lengths ranging from min of 1.26" to 96". Standard length is 6".

Features: A dynamic union between the hanger rod and hanger housing allows for the housing to self adjust to the tube's slope for drainability as well as a 360^o swivel. A 6" rod is the standard length with other lengths available. Fig 221 CH can also be used in combination with the figure 223, 225 or 226 stanchions. This combination will allow the support to be adjusted telescopically to the tube or pipe elevation. Call customer service for the price and availability of special rod lengths.



Black inserts

are "Anchor"

supports


Size Range: 0.24" diameters through 6.00" diameter covering imperial tube, pipe and copper sizes. ISO and DIN standards, and special diameters available upon request.

Hardware: 304 Stainless Steel (Standard), 316 Stainless Steel

Finish: Stainless Steel at a 25 RA

Plastic: Polysulfone (Black = Anchor and Gray = Guide)

Shearing: Anchors - Refer to shear force diagram in technical section (page 29) Guides - Allows free axial movement for thermal expansion of tube or pipe

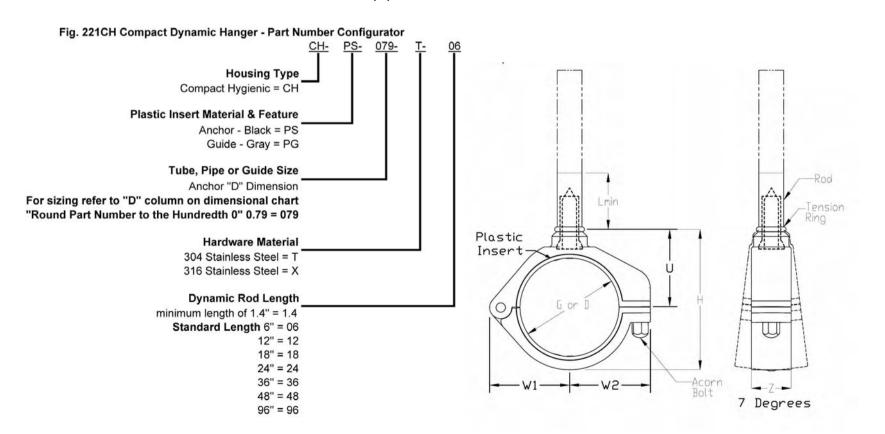

Housing with

BEHRINGER

FIG. 221 CH

DYNAMIC MOUNT HANGER

				(m	221 CH	H UNIVERSAL DIMENSIONS AMONG HOUSINGS				IS			221 CH	Č.,	
	e			heter (m	Part Number (-PS- as	plastic	astic			Dim	ension, in	. (mm)			(kg)
Group No.	Stainless Tube	Pipe	Copper Tube	Outside Diameter (mm)	displayed is an Anchor & -PG- would make a Guide)	"D" Anchor Plastic	"G" Guide Plastic	W1	W2	z	L, min	U	н	Rod Diameter	Weight, Ib (kg)
0	6 mm	ш.	0	6.0	CH-PS-024-T-??	0.24	0.27	-							
	1/4"		1	6.3	CH-PS-025-T-??	0.25	0.29	0.93	1.02	0.75	1.26	0.95	1.54	0.63	0.7
1	3/8"			9.6	CH-PS-038-T-??	0.38	0.40	(24)	(26)	(19)	(32)	(24)	(39)	(16)	(0.3
	1/2"			12.7	CH-PS-050-T-??	0.50	0.54								
		1/4"		13.7	CH-PS-054-T-??	0.54	0.58	1.2.1	100						
2		111	1/2"	16.0	CH-PS-063-T-??	0.63	0.67	1.06 (27)	1.15 (29)	0.75 (19)	1.26 (32)	1.07 (27)	1.77 (45)	0.63 (16)	0.7
	3/4"			19.0	CH-PS-075-T-??	0.75	0.79		()	1.57	(/	(=-)	(1.5)	(1-)	
	20 mm			20.0	CH-PS-079-T-??	0.79	0.82					-			
3		1/2"		21.3	CH-PS-084-T-??	0.84	0.88	1.20	1.28	0.75	1.26	1.20	2.04	0.63	0.8
5			3/4"	22.4	CH-PS-088-T-??	0.88	0.91	(31)	(33)	(19)	(32)	(30)	(52)	(16)	(0.3
	1"			25.4	CH-PS-100-T-??	1.00	1.04				-				
		3/4"		26.7	CH-PS-105-T-??	1.05	1.09				1				
4			1"	28.7	CH-PS-113-T-??	1.13	1.16	1.45	1.56	0.75	1.26	1.45	2.53	0.63	0.8
•		1"		33.5	CH-PS-132-T-??	1.32	1.35	(37)	(40)	(19)	(32)	(39)	(65)	(16)	(0.3
	1 1/2"			38.1	CH-PS-150-T-??	1.50	1.54								
	40 mm			40.0	CH-PS-158-T-??	1.58	1.61								
5			1 1/2"	41.4	CH-PS-163-T-??	1.63	1.66	1.74	1.79	0.75	1.26	1.70	3.03	0.63	0.9
°.		1 1/2"		48.3	CH-PS-190-T-??	1.90	1.94	(44)	(46)	(19)	(32)	(43)	(77)	(16)	(0.4
	2"			50.8	CH-PS-200-T-??	2.00	2.04								
	52 mm			52.0	CH-PS-205-T-??	2.05	2.10								
6	1		2"	54.0	CH-PS-213-T-??	2.13	2.18	2.02	2.04	1.00	1.36	2.04	3.63	0.75	1.3
		2"		60.3	CH-PS-238-T-??	2.38	2.43	(51)	(52)	(25)	(35)	(52)	(92)	(19)	(0.6
9	2 1/2"			63.5	CH-PS-250-T-??	2.50	2.55								
	70 mm			70.0	CH-PS-276-T-??	2.76	2.81	2.27	2.29	1.00	1.20	2.29	1.12	0.75	1.4
7		2 1/2"		73.1	CH-PS-288-T-??	2.88	2.93	2.27 (58)	(58)	(25)	1.36 (35)	(58)	4.13 (105)	(19)	(0.6
	3"		1	76.1	CH-PS-300-T-??	3.00	3.05			-					
			3"	79.5	CH-PS-313-T-??	3.13	3.18	2.76	2.79	1.00	1.36	2.79	5.13	0.75	1.6
8		3"		88.9	CH-PS-350-T-??	3.50	3.55	(70)	(71)	(25)	(35)	(71)	(131)	(19)	(0.7
	4"			101.6	CH-PS-400-T-??	4.00	4.05								
	104 mm			104.0	CH-PS-409-T-??	4.09	4.14							0.75	
8A	1		4"	104.9	CH-PS-413-T-??	4.13	4.18	3.00 (76)	3.09 (78)	1.00 (25)	1.36 (35)	3.04 (77)	5.63 (143)	0.75 (19)	1.73
		4"		114.3	CH-PS-450-T-??	4.50	4.55	1.1							
9	129 mm			129.0	CH-PS-508-T-??	5.08	5.13	3.98	4.46	1.50	1.78	4.16	7.74	1.00	5.3
-	6"			152.4	CH-PS-600-T-??	6.00	6.05	(101)	(113)	(38)	(45)	(106)	(197)	(25)	(2.4

All standard sizes shown, special diameters available upon request

FIG. 221 CHR

 $\texttt{Rigid}\,\texttt{M}\,\texttt{ount}\;\;\texttt{Hanger}$

Housing with

Gray inserts are "Guide"

supports

Rigid "Anchor or Guide" Hanger / Rod Mount Unit

One piece unit with rod welded to the hanger housing. Hanger rods are available in lengths up to 96". Standard rod length is 6"

Features: The rigid hanger is ideal for supporting vertical runs and reducing vibrations. This type rod connection does not offer the dynamic slope adjustment. 6" rod is the standard length with other lengths available. Fig 221 CHR can also be used in combination with the figure 223, 225 or 226 stanchions. This combination will allow the support to be adjusted telescopically to the tube or pipe elevation. Call customer service for the price and availability of special rod lengths.

Size Range: 0.24" diameters through 6.00" diameter covering imperial tube, pipe and copper sizes. ISO and DIN standards, and special diameters available upon request.

Housing with Black inserts are "Anchor" supports

Finish: Stainless steel at a 25 RA

Plastic: Polysulfone (Black = Anchor and Gray = Guide)

Hardware: 304 Stainless Steel (Standard), 316 Stainless Steel

Shearing: Anchors - Refer to shear force diagram in technical section (page 29) Guides - Allows free axial movement for thermal expansion

of tube or pipe

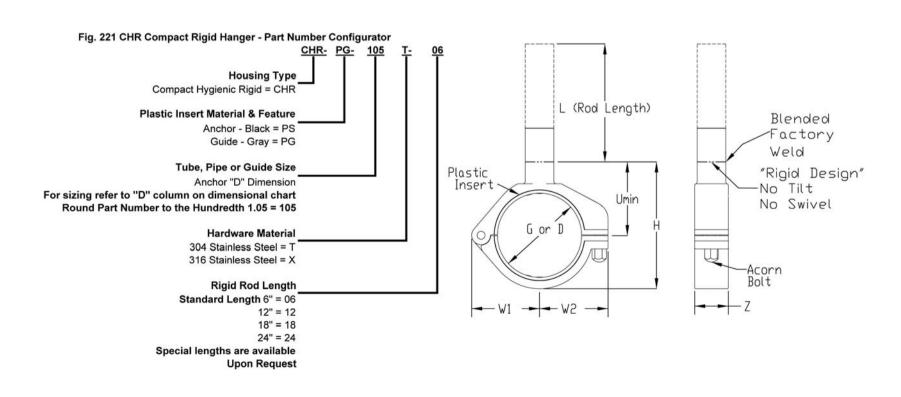


FIG. 221 CHR

RigidMount Hanger

				(m	221 CHR	U	AMON			NS		2	221 CH	IR	
Group No.	Stainless Tube	Pipe	Copper Tube	Outside Diameter (mm)	Part Number (-PS- as displayed is an Anchor & -PG- would make a Guide)	"D" Anchor Plastic	"G" Guide Plastic	W1	W2	Dime Z	u (min)	(mm) H	r	Rod Diameter	Weights Ib (kg)
	6 mm			6.0	CHR-PS-024-T-??	0.24	0.27								
1	1/4"			6.3	CHR-PS-025-T-??	0.25	0.29	0.93	1.02	0.75	1.08	1.67	??	1/2"	0.58
•	3/8"			9.6	CHR-PS-038-T-??	0.38	0.40	(24)	(26)	(19)	(28)	(42)		(12)	(0.26
	1/2"			12.7	CHR-PS-050-T-??	0.50	0.54					_			
		1/4"		13.7	CHR-PS-054-T-??	0.54	0.58								177
2			1/2"	16.0	CHR-PS-063-T-??	0.63	0.67	1.06 (27)	1.15 (29)	0.75 (19)	1.23 (31)	1.93 (49)	77	1/2" (12)	0.60
	3/4"			19.0	CHR-PS-075-T-??	0.75	0.79	((20)	(10)	(01)	(,		(12)	(0.2.
	20 mm			20.0	CHR-PS-079-T-??	0.79	0.82								
		1/2"		21.3	CHR-PS-084-T-??	0.84	0.88	1.20	1.28	0.75	1.35	2.19		1/2"	0.66
3			3/4"	22.4	CHR-PS-088-T-??	0.88	0.91	(31)	(33)	(19)	(34)	(56)	??	(12)	(0.30
	1"			25.4	CHR-PS-100-T-??	1.00	1.04	1							
		3/4"		26.7	CHR-PS-105-T-??	1.05	1.09								
		5/4	1"	28.7	CHR-PS-113-T-??	1.13	1.16			1.2		10.10			
4		1"		33.5	CHR-PS-132-T-??	1.32	1.35	1.45 (37)	1.56 (40)	0.75 (19)	1.66 (42)	2.74 (69)	??	1/2" (12)	0.73
	1 1/2"	-		38.1	CHR-PS-150-T-??	1.50	1.54								
	40 mm			40.0	CHR-PS-158-T-??	1.58	1.61								
			1 1/2"	41.4	CHR-PS-163-T-??	1.63	1.66	1.74	1.70	0.75	1.05	2.40		4/0"	0.00
5		1 1/2"		48.3	CHR-PS-190-T-??	1.90	1.94	(44)	1.79 (46)	0.75 (19)	1.85 (47)	3.18 (81)	??	1/2" (12)	0.80
	2"			50.8	CHR-PS-200-T-??	2.00	2.04								
	52 mm			52.0	CHR-PS-205-T-??	2.05	2.10								
			2"	54.0	CHR-PS-213-T-??	2.13	2.18	2.02	2.04	1.00	2.18	3.77		5/8"	1.6
6		2"		60.3	CHR-PS-238-T-??	2.38	2.43	(51)	(52)	(25)	(55)	(96)	25	(16)	(0.73
	2 1/2"			63.5	CHR-PS-250-T-??	2.50	2.55	1							-
	70 mm			70.0	CHR-PS-276-T-??	2.76	2.81			1.1.1					
7		2 1/2"		73.1	CHR-PS-288-T-??	2.88	2.93	2.27 (58)	2.29 (58)	1.00 (25)	2.34 (59)	4.18 (106)	??	5/8" (16)	1.67
	3"			76.1	CHR-PS-300-T-??	3.00	3.05			(20)	(50)	((10)	
			3"	79.5	CHR-PS-313-T-??	3.13	3.18								
8		3"		88.9	CHR-PS-350-T-??	3.50	3.55	2.76 (70)	2.79 (71)	1.00 (25)	3.08 (78)	5.42 (137)	??	3/4" (19)	1.86
	4"			101.6	CHR-PS-400-T-??	4.00	4.05					appline of			
	104 mm			104.0	CHR-PS-409-T-??	4.09	4.14		1						
8A		- 1	4"	104.9	CHR-PS-413-T-??	4.13	4.18	3.01 (76)	3.09 (78)	1.00 (25)	3.28 (83)	5.87 (149)	??	3/4" (19)	1.88
		4"		114.3	CHR-PS-450-T-??	4.50	4.55			12-24	1	1		1.557	
	129 mm			129.0	CHR-PS-508-T-??	5.08	5.13	3.98	4.46	1.50	4.45	8.03		1"	6.21
9	6"			152.4	CHR-PS-600-T-??	6.00	6.05	(101)	(113)	(38)	(113)	(204)	??	(25)	(2.8

All standard sizes shown, special diameters available upon request

FIG. 221 CHW

W eld Plate Mount Support

Rigid "Anchor or Guide" Support with Weld Plate

One piece unit with weld plate attached to hanger housing.



Features: Compact housing is mounted on a weld plate. This type of mounting configuration does not offer the dynamic slope adjustment feature. The CHW hanger is ideal for supporting vertical runs and reducing vibrations.

Size Range: 0.24" diameters through 6.00" diameter covering imperial tube, pipe and copper sizes. ISO and DIN standards and special diameters available upon request.

Housing with Gray inserts are "Guide" supports

Housing with Black inserts are "Anchor" supports

Hardware: 304 Stainless Steel (Standard), 316 Stainless Steel

Finish: Stainless Steel at a 25 RA

Plastic: Polysulfone (Black = Anchor and Gray = Guide)

Shearing: Anchors - Refer to shear force diagram in technical section (page 29)

Guides - Allows free axial movement for thermal expansion of tube or pipe


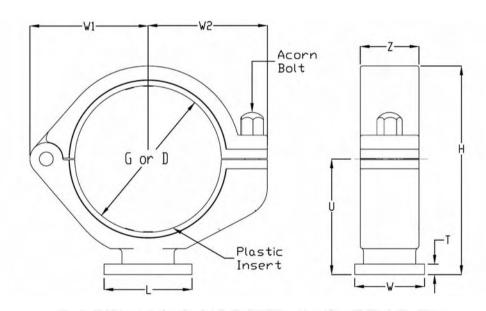


Fig. 221 CHW Weld Plate Mount Support - Part Number Configurator

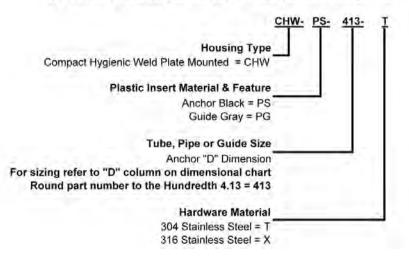

221 CHW

FIG.

BEHRINGER

W eld Plate Mount Support

	1	1	1	(mu	221 CHW	U	AMON	al dimi G hous		IS			221	CHW		
	υ			eter (m	Part Number (-PS-	lastic	astic			E	Dimensio	on, in. (n	nm)			(kg)
Group No.	Stainless Tube	Pipe	Copper Tube	Outside Diameter (mm)	as displayed is an Anchor & -PG- would make a Guide)	"D" Anchor Plastic	"G" Guide Plastic	W1	W2	z	U	н	Ţ	Ŀ.	w	Weights, Ib (kg)
	6 mm	1	1.07	6.0	CHW-PS-024-T	0.24	0.27									
1	1/4"	i i i		6.3	CHW-PS-025-T	0.25	0.29	0.93	1.02	0.75	1.17	1.76	3/16"	1.50	1.50	0.3
3	3/8"			9.6	CHW-PS-038-T	0.38	0.40	(24)	(26)	(19)	(30)	(45)	(4.7)	(38)	(38)	(0.17
	1/2"	1.1		12,7	CHW-PS-050-T	0.50	0.54				11 C -	-	-	- 1		
1		1/4"	12.1	13.7	CHW-PS-054-T	0.54	0.58		1.1		1.50			5.0		
2			1/2"	16.0	CHW-PS-063-T	0.63	0.67	1.06 (27)	1.15 (29)	0.75 (19)	1.32 (33)	2.02 (51)	3/16" (4.7)	1.50 (38)	1.50 (38)	0.39
	3/4"	in the second second		19.0	CHW-PS-075-T	0.75	0.79							1.1	-	
1	20 mm			20.0	CHW-PS-079-T	0.79	0.82					-				
2		1/2"	1	21.3	CHW-PS-084-T	0.84	0.88	1.20	1.28	0.75	1.44	2.28	3/16"	1.50	1.50	0.4
3	-	1	3/4"	22,4	CHW-PS-088-T	0.88	0.91	(31)	(33)	(19)	(37)	(58)	(4.7)	(38)	(38)	(0.2
	1"	IT	12.2	25.4	CHW-PS-100-T	1.00	1.04			22		2		1	1.1	
		3/4"		26.7	CHW-PS-105-T	1,05	1.09					1				
J		1	1"	28.7	CHW-PS-113-T	1.13	1.16	1.45	1.56	0.75	1.75	2.83	3/16" (4.7)	1.75 (44)	1.75 (44)	0.56 (0.25
4		ી.	1	33.5	CHW-PS-132-T	1.32	1.35	(37)	(39)	(19)	(44)	(72)				
	1 1/2"	1	12-5	38.1	CHW-PS-150-T	1.50	1.54		1		1	-				
	40 mm			40.0	CHW-PS-158-T	1.58	1.61		1-	17.				1		
5		1	1 1/2"	41.4	CHW-PS-163-T	1.63	1.66	1.74	1.79	0.75	1.94	3.27	3/16"	1.75	1.75	0.6
9		1 1/2"	1	48,3	CHW-PS-190-T	1.90	1.94	(44)	(46)	(19)	(49)	(83)	(4.7)	(44)	(44)	(0.2
	2"	-		50.8	CHW-PS-200-T	2.00	2.04	1.	12				-		24	1
1	52 mm	1.00		52.0	CHW-PS-205-T	2.05	2.10			-				12.4		
6			2"	54.0	CHW-PS-213-T	2.13	2.18	2.02	2.04	1.00	2.27	3.86	3/16"	2.50	1.75	0.9
		2"		60.3	CHW-PS-238-T	2.38	2.43	(51)	(52)	(25)	(58)	(98)	(4.7)	(64)	(44)	(0.4
	2 1/2"		10.01	63.5	CHW-PS-250-T	2.50	2.55		1.1	1				1.1	1.11	
	70 mm		12.10	70.0	CHW-PS-276-T	2.76	2.81			L.J					1.1	
7	211	2 1/2"		73.1	CHW-PS-288-T	2.88	2.93	2.27 (58)	2.29 (58)	1.00 (25)	2.43 (62)	4.27 (108)	3/16" (4.7)	2.50 (64)	1.75 (44)	0.90
	3"			76.1	CHW-PS-300-T	3.00	3.05	1	11			-	1			
Ĩ			3"	79.5	CHW-PS-313-T	3,13	3.18	0.70	0.70	1 20	0.47		2/2011	0.50	4.90	
8		3"		88.9	CHW-PS-350-T	3.50	3.55	2.76 (70)	2.79 (71)	1.00 (25)	3.17 (81)	5.51 (140)	3/16" (4.7)	2.50 (64)	1.75 (44)	1.19
	4"	-	1.1.1.1.1	101.6	CHW-PS-400-T	4.00	4.05		-		~~ ~	1		2	1.1	
	104 mm		12 1	104.0	CHW-PS-409-T	4,09	4.14						a loon			
8A			4"	104.9	CHW-PS-413-T	4.13	4.18	3.00 (76)	3.09 (78)	1.00 (25.4)	and the second se	5.96 (151)	3/16" (4.7)	2.50 (64)	1.75 (44)	1.17 (0.53)
		4"		114.3	CHW-PS-450-T	4.50	4.55									
9	129 mm			129.0	CHW-PS-508-T	5,08	5.13	3.98	4.46	1.50	4.54	8.12	1/4"	4.00	1.75	4.6
1	6"	1: 7 1		152.4	CHW-PS-600-T	6.00	6.05	(101)	(113)	(38)	(115)	(206)	(6.4)	(108)	(44)	(2.13

All standard sizes shown, special diameters available upon request

FIG. 221 CHT

Threaded Mount Hanger

HRIN

Threaded Anchor or Guide Hanger



Features: The threaded mounting section, on top of housing, doubles as a threaded rod connecter and a welding platform. This type rod connection does not offer the dynamic slope adjustment feature. Figure 221 CHT, with a rod, can also be used in combination with the figure 223, 225 or 226 stanchions. This combination will allow the support to be adjusted telescopically to the tube or pipe elevation. Call customer service for the price and availability of special rod lengths.



Housing with Black inserts are "Anchor" supports

Size Range: 0.24" diameters through 6.00" diameter covering imperial tube, pipe and copper sizes. ISO and DIN standards, and special diameters available upon request.

Housing with Gray inserts are "Guide" supports

Hardware: 304 Stainless Steel (Standard), 316 Stainless Steel

One piece unit with threaded adaptor. Rod is sold separately.


Finish: Stainless steel at a 25 RA

Plastic: Polysulfone (Black = Anchor and Gray = Guide)

Shearing: Anchors - Refer to shear force diagram in technical section (page 29)

Guides - Allows free axial movement for thermal expansion of tube or pipe

Fig. 221 CHT Compact Threaded Mount Hanger - Part Number Configurator

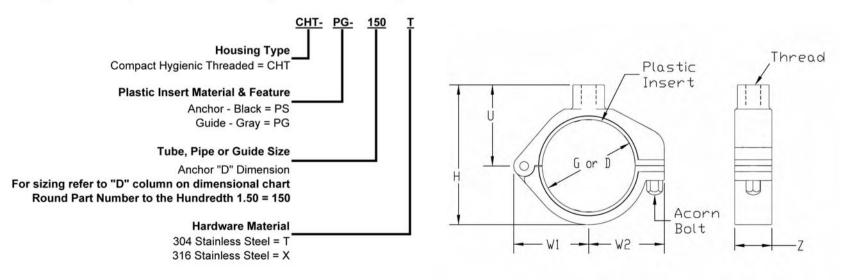

See Figure 245 to Order Threaded Rod Separately

BEHRINGER

Threaded M ount Hanger

FIG.	221	CHT

				-	221 CHT	U	AMON	AL DIM		NS			221 CH	IT	
				um)		<u>e</u>	0	1		Dime	ension, i	n. (mm)	1. P. I		-
Group No.	Stainless Tube	Pipe	Copper Tube	Outside Diameter (mm)	Part Number (-PS- as displayed is an Anchor & -PG- would make a Guide)	le Pic	W1	W2	z	υ	н	Thread	Rod Diameter (Sold Separtely)	Weights Ib (kg)	
11	6 mm			6.0	CHT-PS-024-T	0.24						1 T			
1	1/4"	1		6.3	CHT-PS-025-T	0.25	0.29	0.93	1.02	0.75	5 1.08	1.67	3/8"-16	1/2" (12)	0.26
1	3/8"			9.6	CHT-PS-038-T	0.38	0.40	(24)	(26)	(19)	(28)	(42)	(10)	B	(0.12
	1/2"			12.7	CHT-PS-050-T	0.50	0.54						4		-
ÎŤ		1/4"	1.1	13.7	CHT-PS-054-T	0.54	0.58	1		1.71	17.07	100	735	1/2"	10.8
2			1/2"	16.0	CHT-PS-063-T	0.63	0.67	1.06 (27)	1.15 (29)	0.75 (19)	1.23 (31)	1.93 (49)	3/8"-16 (10)	(12)	0.28 (0.13
IJ	3/4"			19.0	CHT-PS-075-T	0.75	0.79	Les C	30	3.37	32.4	3.54	1.50	B	The set
	20 mm		1	20,0	CHT-PS-079-T	0.79	0.82	2							
		1/2"		21.3	CHT-PS-084-T	0.84	0.88	1.20	1.28	0.75	1.35	5 2.19	3/8"-16	1/2"	0.33
3			3/4"	22.4	CHT-PS-088-T	0.88	0.91	(31)	(33)	(19)	(34)	(56)	(10)	(12) B	(0.15
	1"			25.4	CHT-PS-100-T	1.00	1.04	1.2	1.1	1	-	1	100		2
Π		3/4"		26.7	CHT-PS-105-T	1.05	1.09								
			1"	28.7	CHT-PS-113-T	1.13	1.16	1.46	1.56	0.75	1.66	2.74	3/8"-16	1/2"	0.40
4	11 11	À.		33.5	CHT-PS-132-T	1.32	1.35	(37)	(40)	(19)	(42)	(69)	(10)	(12)	(0.18
	1 1/2"			38.1	CHT-PS-150-T	1.50	1.54				-	11	1.1.1		
	40 mm	1.0	1	40.0	CHT-PS-158-T	1.58	1.61				-		1.1		
	1	· · · · ·	1 1/2"	41.4	CHT-PS-163-T	1.63	1.66	1.74	1.79	0.75	1.85	3.18	3/8"-16	1/2"	0.48
5	1	1 1/2"		48.3	CHT-PS-190-T	1.90	1.94	(44)	(46)	(19)	(47)	(81)	(10)	(12) B	(0.22
ļl,	2"		i El	50.8	CHT-PS-200-T	2.00	2.04		-				1.1.	1.	-
ĨĨ	52 mm			52.0	CHT-PS-205-T	2.05	2.10	1			_				
			2"	54.0	CHT-PS-213-T	2.13	2.18	2.02	2.04	1.00	2.18	3.77	3/8"-16	5/8"	0.70
6	11.1	2"	1 =	60.3	CHT-PS-238-T	2.38	2.43	(51)	(52)	(25)	(55)	(96)	(10)	(16) C	(0.32
L.	2 1/2"			63.5	CHT-PS-250-T	2.50	2.55								
	70 mm			70.0	CHT-PS-276-T	2.76	2.81	12.7		15				5/8"	. 2.
7	1	2 1/2"		73.1	CHT-PS-288-T	2.88	2.93	2.27 (58)	2.29 (58)	1.00 (25)	2.34 (59)	4.18 (106)	3/8"-16 (10)	(16)	0.76
	3"			76.1	CHT-PS-300-T	3,00	3,05		1-11	100	14.24		1.21	C	1919.1
			3"	79.5	CHT-PS-313-T	3.13	3,18	5.5	7.1	3.5	5.1	1.11		3/4"	
8		3"		88.9	CHT-PS-350-T	3.50	3.55	2.76 (70)	2,79 (71)	1.00 (25)	3.08 (78)	5.42 (137)	1/2"-13 (12)	(19)	0.95
	4"			101.6	CHT-PS-400-T	4.00	4.05		15-11		2.24	aceta.		D	
16	104 mm			104.0	CHT-PS-409-T	4.09	4.14	1					1.1	3/4"	
8A	-		4"	104.9	CHT-PS-413-T	4.13	4.18	3.00 (76)	3.09 (78)	1.00	3.28	5,87 (149)	1/2"-13 (12)	(19)	0.97
		4"		114.3	CHT-PS-450-T	4.50	4.55	1,107	(10)) (25.4)	25.4) (83)	(1.40)	1.27	D	19:44
11	129 mm	1.000	1	129.0	CHT-PS-508-T	5.08	5.13	3.98	4.46	1.50	4.46	8.04	3/4"-10	1"	4.20
9	6"			152.4	CHT-PS-600-T	6.00	6.05	(101)	(113)	(38)	(113)	(204)	(19)	(25) E	(1.90

All standard sizes shown, special diameters available upon request

245

FIG.

BEHRINGER

THREADED SUPPORT ROD

Size Range: 3/8" outside diameter to 1" outside diameter with different rod lengths and connection threads avialable.

Hardware: 304 Stainless Steel or 316 Stainless Steel; Carbon or Electro-Zinc Plated Carbon Steel

Finish: 25 Ra (for 304/316); Other available upon request

Ordering: To identify the proper thread refer to the "T" column on Fig. 221CHT or the Hang Nut column on Fig. 201. Then use the Fig 245 part number configuator located at the bottom of this page.

Installations: Thread the rod into housing. Cut the rod in the field to proper length. Field weld the rod to support structure. The rod can also be used in combination with the figure 223, 225 or 226 stanchions. This combination will allow the support to be adjusted telescopically to the tube or pipe elevation.

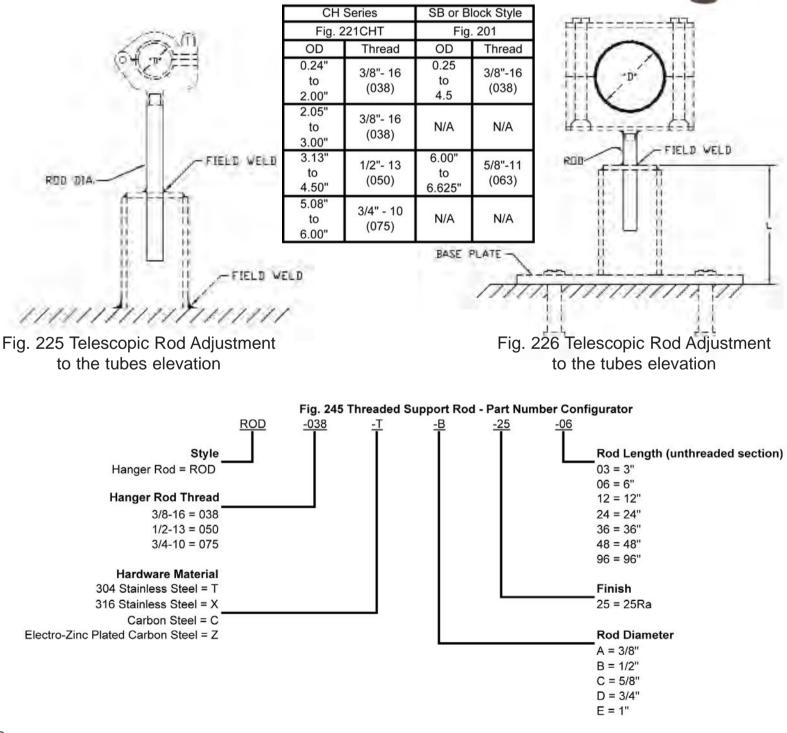


FIG. 223

TELESCOPICADJUSTING ROUND FLOOR MOUNT STAND

The Telescopic Adjusting Round Floor Mount Stand allows the housing's rod elevation to be adjusted up to 2" from the base plate's surface. The rod attached to the housing slides inside the base plate's elevation adjustment tube (.560 ID x .750 OD). This fine tune adjustment allows the installer to quickly change the support's elevation to match the tube's distance from the floor. The base plate can be supplied with or without anchor bolt holes. Anchor bolts not supplied by Behringer.

Base Plate Sizing: RSP1 & RSP2 - 0.25" to 2.00" OD tube & pipe sizes RSP3 & RSP4 - 2.05" to 4.50" OD tube & pipe sizes RSP5 & RSP6 - 5.08" to 6.00" OD tube & pipe sizes



Hardware: 304 Stainless Steel, 316 Stainless Steel, Carbon Steel & Electro-Zinc Plated Carbon Steel

Finish: MILL = Fabricated steel and welds are a mill finish

BUFF = Fabricated steel and weld are buffed to remove splatter

BLND = Fabricated steel is polished and welds are blended

Special finishes and painted stands are available, call Behringer Customer Service for price and availability.

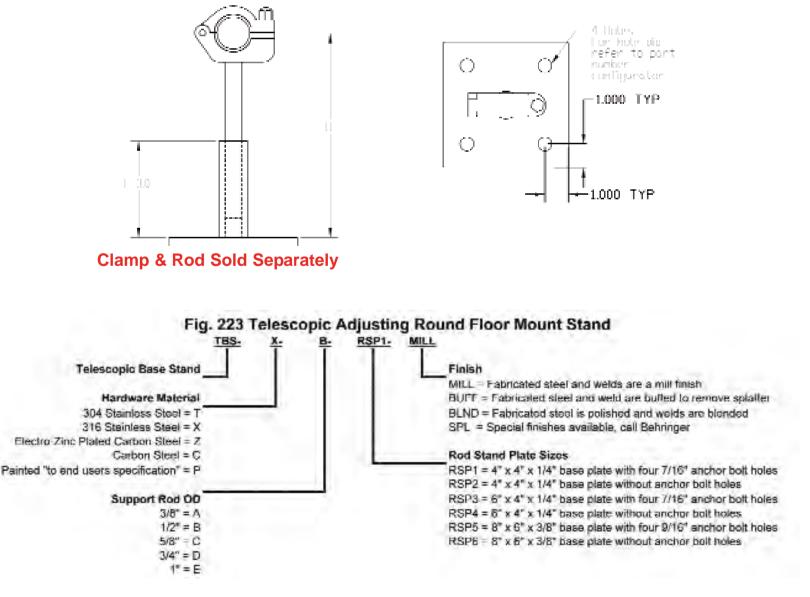


FIG. 224

CH SERIES ROD STAND PLATE




One piece CH Series Rod Stand Plate with rod cut to specified length. The rod is welded to the base plate, which can be supplied with or without anchor bolt-holes. Anchor bolts not supplied by Behringer.


The height is calculated from the top of the plate to centerline of tube or pipe. Please refer to "U" min column in catalog for minimum height of the required RH series product.

Base Plate Sizing: RSP1 & RSP2 - 0.25" to 2.00" OD tube & pipe sizes RSP3 & RSP4 - 2.05" to 4.50" OD tube & pipe sizes RSP5 & RSP6 - 5.08" to 6.00" OD tube & pipe sizes

Hardware: 304 Stainless Steel, 316 Stainless Steel

Finish: MILL = Fabricated steel and welds are a mill finish BUFF = Fabricated steel and weld are buffed to remove splatter BLND = Fabricated steel is polished and welds are blended Special finishes and painted stands are available, call Behringer Customer Service for price and availability.

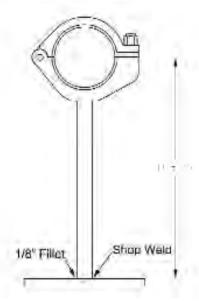

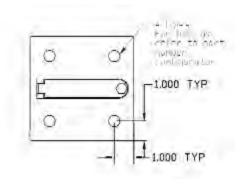

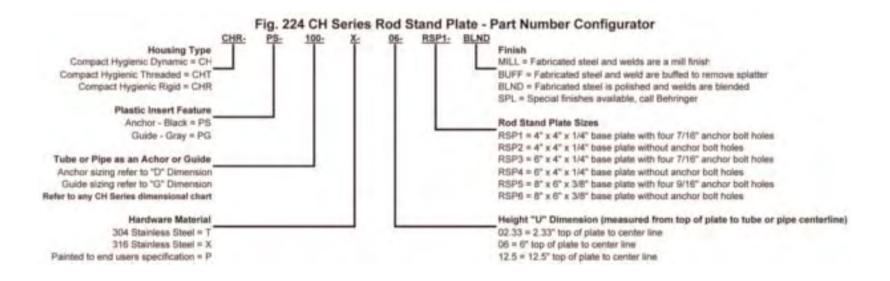


FIG. 225


Telescopic Adjusting Stanchion > Hang Mount

Hanger Stanchion with square or round tube cut to specified length. One end of the tube has a capped end with a rod hole. The rod hole is used for telescopic adjustment of the hanger rod. Specify the steel finish and the finish on the weld.

Features: Hole in capped end of tube allows the hanger rod to be manually adjusted for telescopic location of the tube or pipe.

Hardware: 304 Stainless Steel; 316 Stainless Steel, Carbon Steel & Electro-Zinc Plated Carbon Steel

Finish: MILL = Fabricated steel and welds are a mill finish BUFF = Fabricated steel and welds are buffed to remove splatter BLND = Fabricated steel is polished and welds are blended Special finishes and painted stanchions are available, call Behringer Customer Service for price and availability.

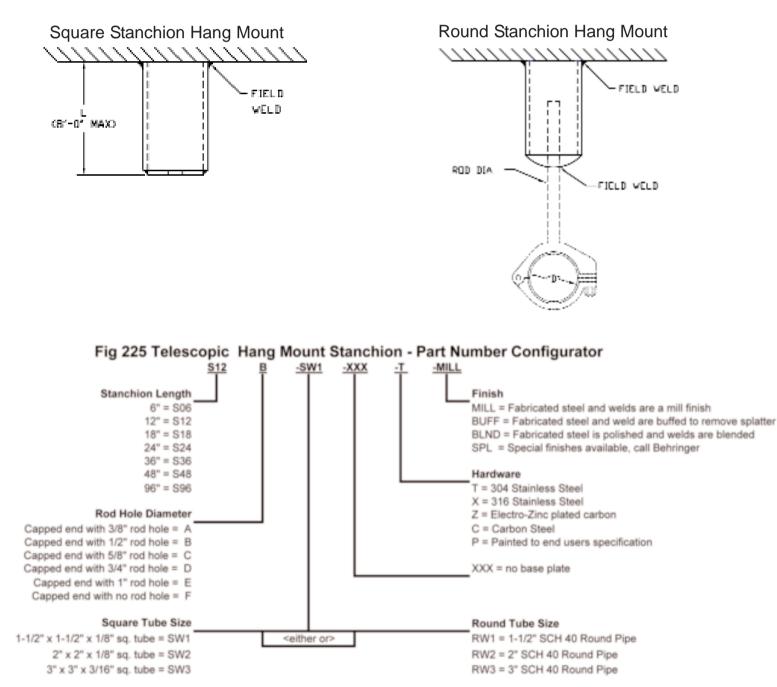





TELESCOPICADJUSTING STANCHION > FOOR MOUNT


One piece Floor Stand with square or round tube cut to specified length. One end of the tube has a capped end with a rod hole. The rod hole is used for telescopic adjustment of the hanger rod. The open end of the tube is welded to a base plate which can be supplied with or without anchor bolt holes. Specify the steel finish and the finish on the weld.


Features: Hole in capped end of tube allows the hanger rod to be manually adjusted for telescopic location of the tube or pipe.

- Hardware: 304 Stainless Steel; 316 Stainless Steel, Carbon Steel & Electro-Zinc Plated Carbon Steel
 - Finish: MILL = Fabricated steel and welds are a mill finish



BUFF = Fabricated steel and welds are buffed to remove splatter BLND = Fabricated steel is polished and welds are blended Special finishes and painted stanchions are available, call Behringer Customer Service for price and availability.

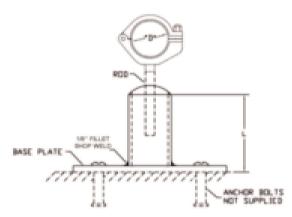

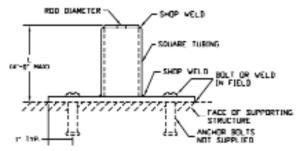


Round Stanchion Floor Mount

Square Stanchion Floor Mount

Base plate can be supplied without mounting holes

Fig. 226 Telescopic Floor Stand Stanchion - Part Number Configurator

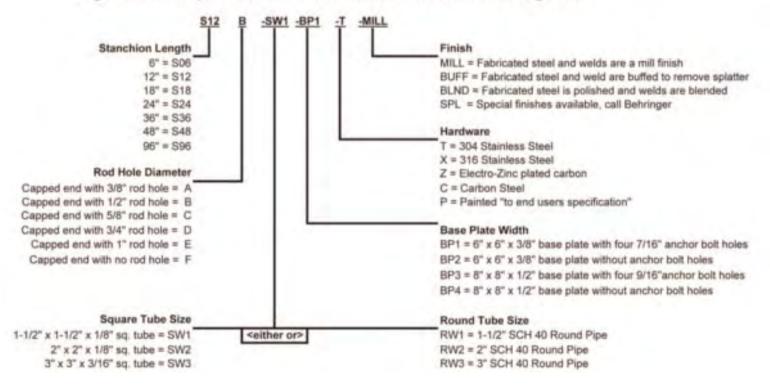

PIPE CLAMP SELECTION

Mounting / Hardware Configuration

Behringer offers an array of mounting configurations and arrangement styles for the Sanitary Smooth Bore Series supports. They can be mounted to the support structure by either welding, bolting, hanging, rail mount, strut mount or via stanchions. In addition, they can be stacked on top of each other to save on space. Please check the ordering code for available assemblies with the configuration you desire. Here are some examples of the mounting options.



Weld Mounting [STW]

Clamps are supplied with a weld plate (STW) for welding directly to the support structure. This is the most commonly used style and includes a cover plate (COP) and hex bolts (HEX).



Hang Mounting [HAP]

Clamps are supplied with a hang plate (HAP) that allows the support block to be installed at a distance from the structural member from which it is mounted. They are hung from threaded rod to the desired elevation.



Bolt Mounting [BAP]

Clamps are supplied with a Base Plate (BAP) for applications where the clamp cannot be welded into position. This is commonly used to mount to non-metallic surfaces, such as wood or drywall.



Rail Mounting [RCN, RAL]

Rail mounting makes installations of multiple lines of different group sizes an easy task. All clamps within one series can be mounted directly to a single channel using Rail Nuts (RCN) or Weld Plates (STW) in conjunction with Behringer's proprietary Mounting Rail (RAL-1).


Strut Mounting [UCN]

Clamps are supplied with Unistrut Clip Nuts (UCN) for mounting to standard Unistrut channel. The nuts adapt to any strut channel that is 1 5/8" wide. The depth of the channel is not important as the UCN clips attach with spring loaded tension to the top of the channel.



Stacking Kits [SKSB]

Stacking kits consist of a set of Clamp Halves (CLH), Stacking Bolts (STB) and a Safety Plate (SAF). A stacking kit is everything needed to take an existing clamp and add an additional level. Start by simply using the hardware from the existing clamp, remove the cover plate, clamp halves, and hex bolts and insert the stacking kit onto the bottom plate and then replace the original hardware on top. Multiple stacking kits can be added to increase the number of clamps stacked in a series.

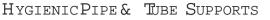

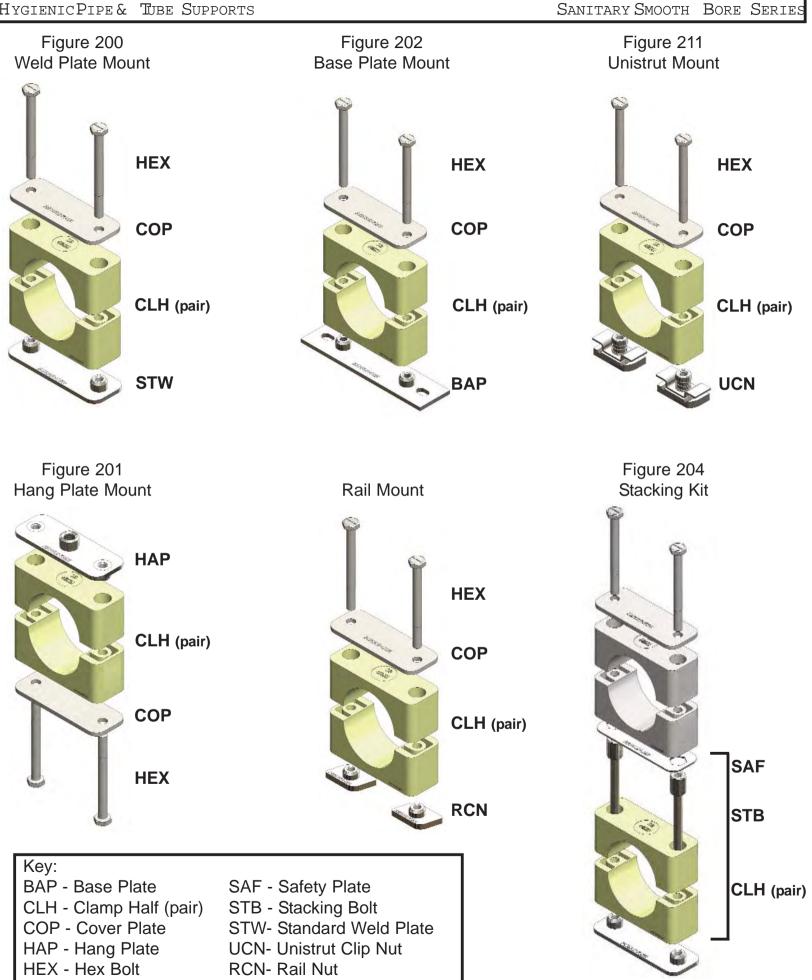


FIG. 200 LBCK STYLE

W eld Plate Mount

2

HRINGE

Size Range: 1/4" outside diameter through 8.625" outside diameter

Hardware: 304 Stainless Steel, 316 Stainless Steel, or Electro-Zinc Plated Carbon Steel

Plastic Inserts: Polypropylene (blue)

Santoprene (beige) Polysulfone (black) HDPE (white) High Temp Nylon (black) *See page 28 for temperature ratings

Installations: Weld bottom plate to structure or supporting member, let cool before mounting plastic blocks.

Thermal Expansion Guide: (Optional) Provides for axial expansion of the tube or pipe due to thermal expansion. One set of two per clamp (See Fig. 207 in accessories)

Thermal Expansion Guide Material: Santoprene, 1/16" insert, Black for service identification

GRP NO.	TUBE OR PIPE SIZE	"D" INCHES	w	н	z	U	BOLT SIZE	LBS.
3	1/4 T 3/8 T 1/2 T 3/4 T 1/2 P 1 T	0.250 0.375 0.500 0.750 0.840 1.000	1.88" (48 mm)	1.38" (35 mm)	1.22" (31 mm)	0.81" (20 mm)	1/4-20	0.4 (0.18 kg)
6	1/4 T 3/8 T 1/2 T 5/8 T 3/4 T 1/2 P 7/8 T 1 T 3/4 P 1-1/4 T 1 -1/4 T 1 -1/2 T 1-1/4 P 1-1/2 P 2 T	0.250 0.375 0.500 0.625 0.750 0.840 0.875 1.000 1.050 1.250 1.315 1.500 1.660 1.900 2.000	3.34" (85 mm)	2.63" (67 mm)	1.22" (31 mm)	1.44" (37 mm)	1/4-20	0.6 (0.27 kg)
7	2 T 2 P 2-1/2 T 2-1/2 P 3 T 3-1/2 T -3 P	2.000 2.375 2.500 2.875 3.000 3.500	5.02" (128 mm)	4.38" (111 mm)	1.22" (31 mm)	2.31" (59 mm)	1/4-20	1.1 (0.50 kg)
7A	4 T	4.000	5.77" (147 mm)	4.8" (122 mm)	1.22" (31 mm)	2.54" (65 mm)	1/4-20	1.5 (0.68 kg)
8	6 T 6P	6.000 6.625	8.88" (226 mm)	7.65" (194 mm)	1.50" (38 mm)	4.01" (102 mm)	3/8-16	4.4 (1.99 kg)
9	8T 8P	8.000 8.625	12.5" (318 mm)	10" (254 mm)	1.75" (44 mm)	5.38" (137 mm)	5/8 - 11	12.5 (5.7 kg)


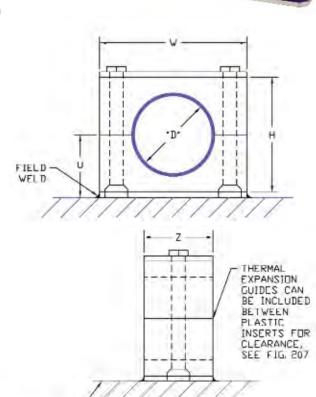


Fig 200 Smooth Bore Weld Plate Mount - Part Number Configurator

FACE OF SUPPORTING STEEL

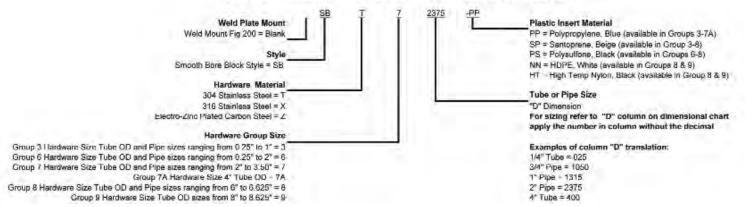

201

FIG.

BEHRINGER

HANG PLATE MOUNT



Hardware: 304 Stainless Steel, 316 Stainless Steel, or Electro-Zinc Plated Carbon Steel

Plastic Inserts: Polypropylene (blue)


Santoprene (beige) Polysulfone (black) HDPE (white) High Temp Nylon (black) *See page 28 for temperature ratings

Installations: Hang from threaded rod to desired elevation


Thermal Expansion Guide: (Optional) Provides for axial expansion of the tube or pipe due to thermal expansion. One set of two per clamp (See Fig. 207 in accessories)


Thermal Expansion Guide Material: Santoprene, 1/16" insert, Black for service identification

GRP NO.	TUBE OR PIPE SIZE	"D" INCHES	w	н	z	U	BOLT SIZE	HANG NUT	LBS.
	1/4 T	0.250							
	3/8 T	0.375]						
3	1/2 T	0.500	1.88"	1.38"	1.22"	0.81"	1/4-20	3/8-16	0.3
3	3/4 T	0.750	(48 mm)	(35 mm)	(31 mm)	(20 mm)	1/4-20	5/0-10	(0.14 kg)
	1/2 P	0.840							
	1 T	1.000							
	1/4 T	0.250							
	3/8 T	0.375	1						
	1/2 T	0.500	1						
	5/8 T	0.625	1						
	3/4 T	0.750	1						
	1/2 P	0.840	1						
	7/8 T	0.875	3.34"	2.63"	1.22"	1.44"			0.5
6	1 T	1.000	(85 mm)	(67 mm)	(31 mm)	(37 mm)	1/4-20	3/8-16	(0.23 kg)
	3/4 P	1.050	1	A			11000		
	1-1/4 T	1.250	1						
	1 P	1.315	1						
	1-1/2 T	1.500	1						
	1-1/4 P	1.660	1						
	1-1/2 P	1.900	1						
	2 T	2.000	1						
-	2 T	2.000							
	2 P	2.375	1						
1.000	2-1/2 T	2.500	5.02"	4.38"	1.22"	2.31"			1.00
7	2-1/2 P	2.875	(128 mm)	(111 mm)	(31 mm)	(59 mm)	1/4-20	3/8-16	(0.45 kg)
	3 T	3.000	1	((100			(0.10.0)
	3-1/2 T -3 P	3.500	l						
7A	4 T	4.000	5.77" (147 mm)	4.8" (122 mm)	1.22" (31 mm)	2.54" (65 mm)	1/4-20	3/8-16*	1.30 (0.59 kg)
8	6 T	6.000	8.88"	7.65"	1.50"	4.01"	3/8 - 16	5/8-11	4.00
	6P	6.625	(226 mm)	(194 mm)	(38 mm)	(102 mm)			(1.8 kg)

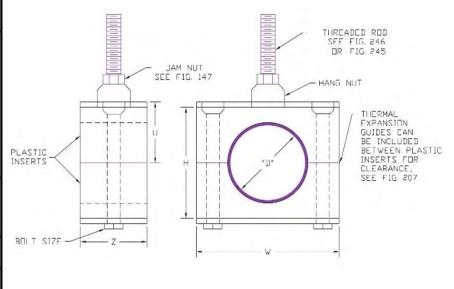

* Also available with a 1/2 - 13 thread

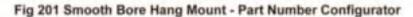

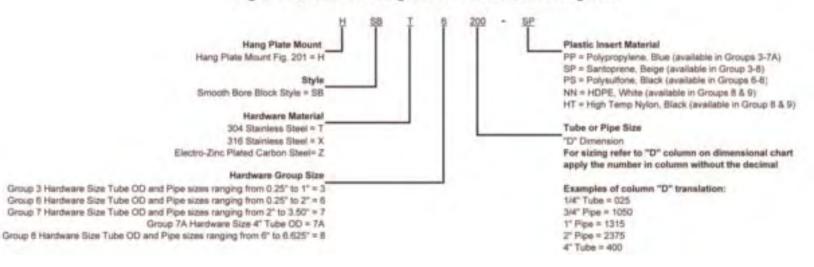



202

FIG.

CHRING CF

Base Plate M ount

Size Range: 1/4" outside diameter through 6.625" outside diameter

Hardware: 304 Stainless Steel, 316 Stainless Steel, or Electro-Zinc Plated Carbon Steel

Plastic Insert: Polypropylene (blue)

Santoprene (beige) Polysulfone (black) HDPE (white) High Temp Nylon (black) *See page 28 for temperature ratings



Installation: Locate bolt holes in mounting structure and either tap into structure or use 1/4-20 bolt and nut to secure

Thermal Expansion Guide: (Optional) Provides for axial expansion of the tube or pipe due to thermal expansion. One set of two per clamp (See Fig. 207 in accessories)

Thermal Expansion Guide Santoprene, 1/16" insert, Black for service identification

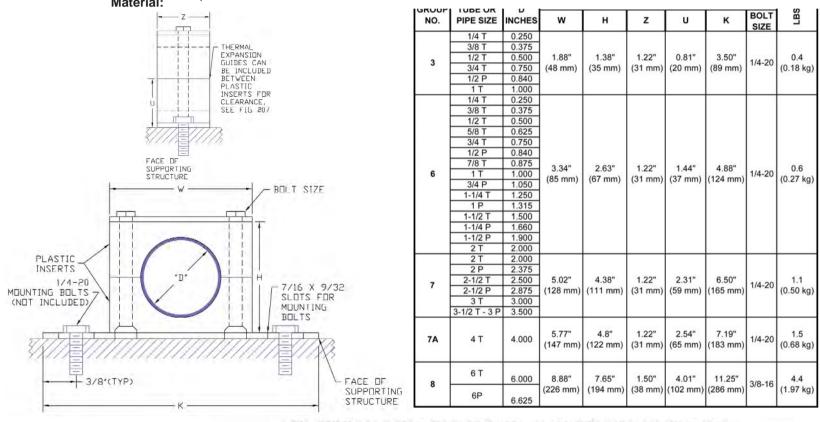


Fig 202 Smooth Bore Base Plate Mount - Part Number Configurator


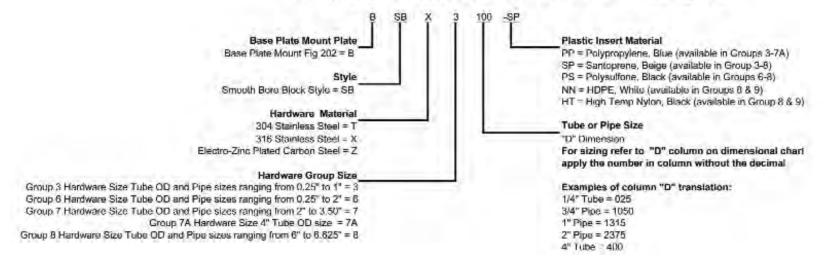


FIG. 203





RAL>1 RILMOUNTING

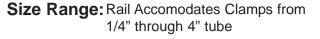

Hardware: 304 Stainless Steel; 316 Stainless Steel; Electro-Zinc Plated Carbon Steel

Installations: Weld Rail (RAL-1) to structure or supporting member. Slide clamp weld plate into rail, locate proper position and assemble clamp. Tightening hex bolts of clamp will lock clamp into position. *See Alternate Mounting Option below

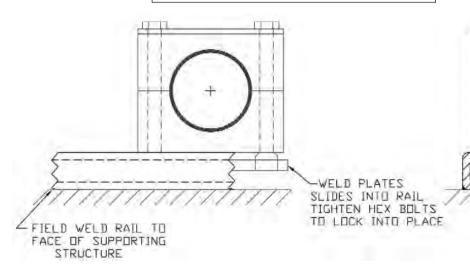

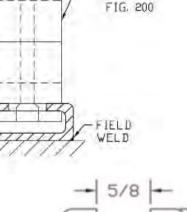

UBE CLAMP SEE

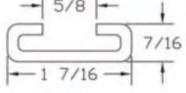


Fig 203 Rail Mounting (RAL-1) - Part Number Configurator

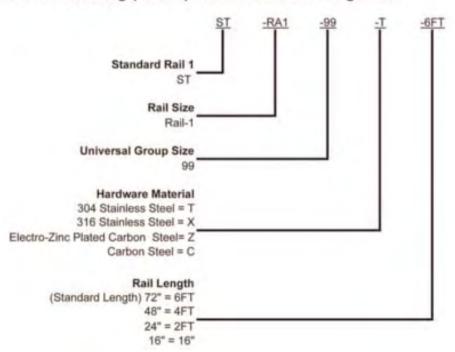




FIG. 204

STACKING KIT

Size Range: Any double combination of sizes 1/4" outside diameter through 3.5" outside diameter

Hardware: 304 Stainless Steel, 316 Stainless Steel, or Electro-Zinc Plated Carbon Steel

Plastic Inserts: Polypropylene (blue)

Santoprene (beige) Polysulfone (black) *See page 28 for temperature ratings

Thermal Expansion Guide: (Optional) Provides for axial expansion of the tube or pipe due to thermal expansion. One set of two per clamp (See Fig. 207 in accessories).

Thermal Expansion Guide Material: Santoprene, 1/16" insert, Black for service identification

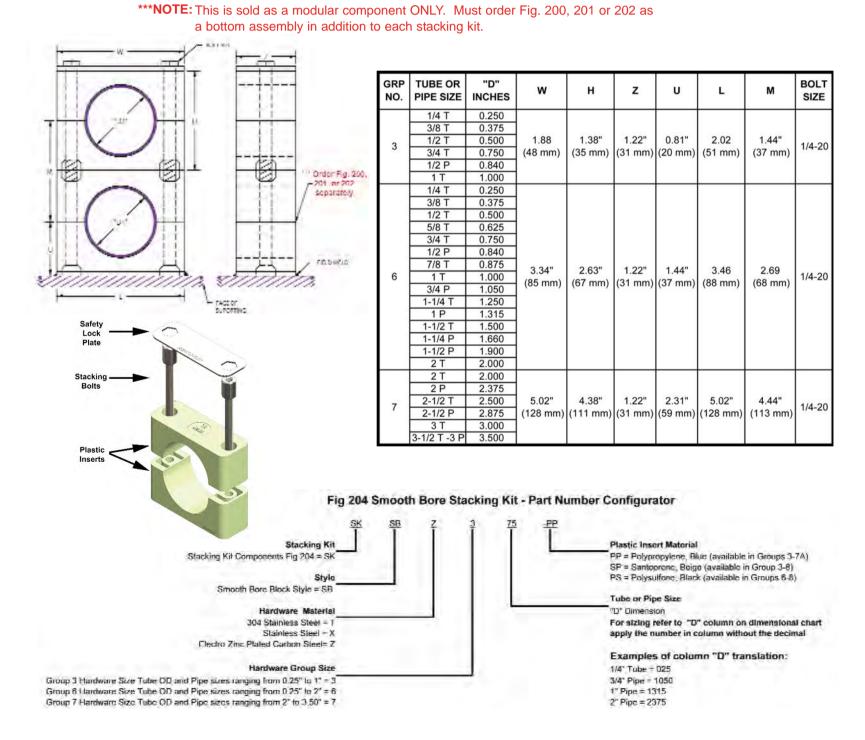


FIG.

BEHRINGER

UNISTRUT MOUNT CLAMP

Size Range: 1/4" outside diameter through 4" outside diameter.

Hardware: 304 Stainless Steel, 316 Stainless Steel, or Electro-Zinc Plated Carbon Steel


Plastic Inserts: Polypropylene (blue) Santoprene (tan) Polysulfone (black) *See page 28 for temperature ratings


Installations: After unistrut rail position has been established, position 2 unistrut rail nuts in channel where desired to accept plastic inserts. Place pipe or tube in clamp perpendicular to unistrut channel. Torque down on clamp bolts to lock assembly in place.


Thermal Expansion Guide: (Optional) Provides for axial expansion of the tube or pipe due to thermal expansion. One set of two per clamp (See Fig. 207 in accessories).


Thermal Expansion Guide Material: Santoprene, 1/16" insert, Black for service identification

GROUP	TUBE OR	"D"		INCH	IES		<i>s</i> i
NO.	PIPE SIZE	INCHES	w	н	Z	U	LBS.
	1/4 T	0.250					
	3/8 T	0.375	1	10000			1.0000
3	1/2 T	0.500	1.88	1.38	1.22	.75 (19 mm)	0.4
3	3/4 T	0.750	(48 mm)	(35 mm)	(31 mm)		(0.18 kg)
	1/2 P	0.840					
	1 T	1.000					
	1/4 T	0.250					
	3/8 T	0.375]				
	1/2 T	0.500	1				
	5/8 T	0.625]				
	3/4 T	0.750					
	1/2 P	0.840	1				
	7/8 T	0.875	3.34	2.63	1.22	1.38	0.6
6	1 T	1.000	Charles Sector	Constant Mar	623 928 62	100000000000000000000000000000000000000	0.6
	3/4 P	1.050	(85 mm)	(67 mm)	(31 mm)		(0.27 kg)
Į.	1-1/4 T	1.250	1				
	1 P	1.315]				
	1-1/2 T	1.500]				
	1-1/4 P	1.660]				
	1-1/2 P	1.900	1				
	2 T	2.000	1				
	2 T	2.000					
	2 P	2.375					
7	2-1/2 T	2.500	5.00	4.38	1.22	2.25	1.1
'	2-1/2 P	2.875	(127 mm)	(111 mm)	(31 mm)	(57 mm)	(0.50 kg)
Ĩ	3 T	3.000					
	3-1/2 T - 3 P	3.500					
7A	4 T	4.000	5.77 (147 mm)	4.8 (122 mm)	1.22 (31 mm)	2.48 (62 mm)	1.5 (0.68 kg)

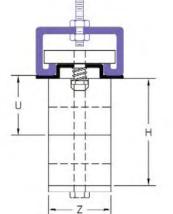

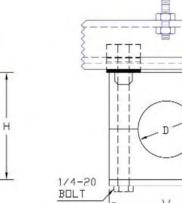

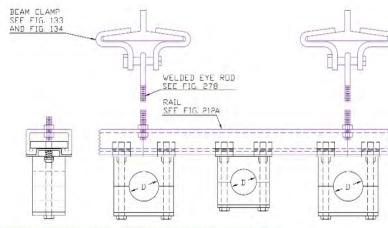

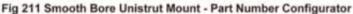



211

FIG. 221

Rod Mount

Size Range: 1/4" outside diameter through 6.625" outside diameter

Hardware: 304 Stainless Steel, 316 Stainless Steel, or Electro-Zinc Plated Carbon Steel

Plastic Inserts: Polypropylene (blue) Santoprene (beige) Polysulfone (black) HDPE (white) High Temp Nylon (black) *See page 28 for temperature ratings

Installations: Cut bar in field to proper length. Field weld hang or floor mount bar to support structure. Fig 221 can also be used in combination with the figure 225 or 226 stanchions. This combination will allow the support to be adjusted telescopically to the tube or pipe elevation. Call customer service for the price and availability of special rod lengths.





Thermal Expansion Guide: (Optional) Provides for axial expansion of the tube or pipe due to thermal expansion. One set of two per clamp. (See Fig. 207 in accessories).

Thermal Expansion Guide Santoprene, 1/16" insert, Black for service identification


GRP NO.	TUBE OR PIPE SIZE	"D" INCHES	w	z	U	BOLT SIZE	"A" ROD DIA
	1/4 T	0.250					
	3/8 T	0.375					
3	1/2 T	0.500	1.88"	1.22"	0.81"	1/4-20	0.5"
5	3/4 T	0.750	(48 mm)	(31 mm)	(20 mm)	1/4-20	(12.7 mm)
	1/2 P	0.840		· · · ·			
	1 T	1.000					
	1/4 T	0.250					
	3/8 T	0.375					
	1/2 T	0.500					
	5/8 T	0.625					
	3/4 T	0.750					
	1/2 P	0.840					
	7/8 T	0.875	3.34"	1.22"	1.44"	111210-000000	0.5"
6	1 T	1.000	(85 mm)	10.000 T	100000000000000000000000000000000000000	1/4-20	-11-12-12-12-12-12-12-12-12-12-12-12-12-
	3/4 P	1.050		(31 mm)	(37 mm)		(12.7 mm)
	1-1/4 T	1.250					
	1 P	1.315					
	1-1/2 T	1.500					
	1-1/4 P	1.660					
	1-1/2 P	1.900					
	2 T	2.000					
	2 T	2.000					
	2 P	2.375					
7	2-1/2 T	2.500	5.00"	1.22"	2.31"	1/4 20	0.75"
	2-1/2 P	2.875	(127 mm)	(31 mm)	(59 mm)	1/4-20	(19 mm)
	3 T	3.000					
	3-1/2 T -3 P	3.500					
7A	4 T	4.000	5.77" (147 mm)	1.22" (31 mm)	2.54" (65 mm)	1/4-20	0.75" (19 mm)
0	6 T	6.000	8.88"	1.50"	4.01"	2/0.40	1.00"
8	6 P	6.625	(226 mm)	(38 mm)	(102 mm)	3/8-16	(25.4 mm)

"L" WILL BE SUPPLIED AT 6" UNLESS OTHERWISE SPECIFIED

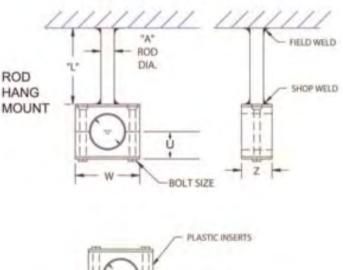

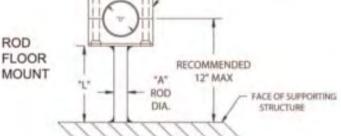




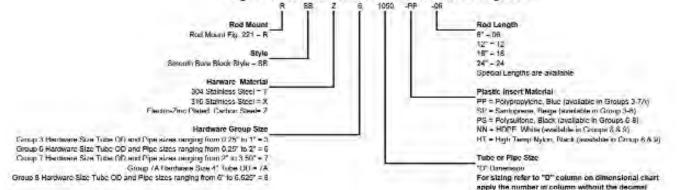

Proper Slope for Drainability

Process piping must be installed to achieve:

- Continuous slope for drainability-offset any deflection present with slope.
- · Adequate spacing of supports to avoid pooling of liquids
- Minimum slope per ASME BPE Standard:
 - Table SD-2.4.3.1-1 Slope Designations for Gravity-Drained Lines
 - GSD1 %"/ft. minimum (5mm/m)
 - GSD2 ½"/ft. minimum (10mm/m)
 - (min. recommended by ASME for product-contact lines)
 - GSD3 ¼"/ft. minimum (20mm/m)
 - GSD0 Line slope not required
- Slope measurements should be taken with a calibrated digital level or protractor per ASME BPE Non-Mandatory Appendix C
- Added support in proximity to any concentrated loads
- Supports at each change of direction
- Corrosion resistance
- Materials compatible with the chemical, thermal, and physical performance requirements of each application

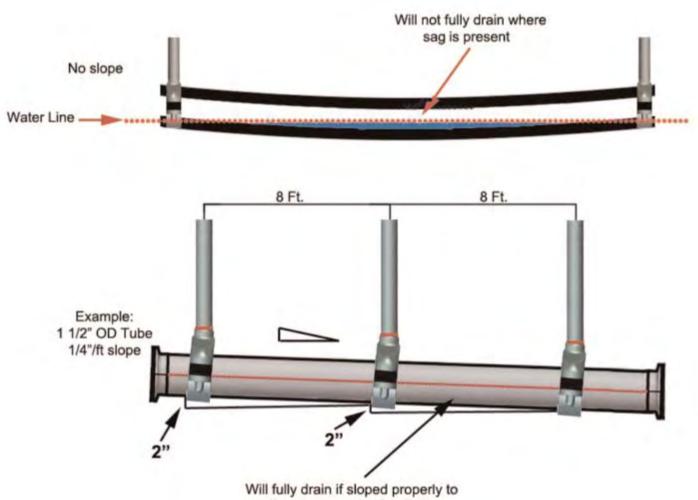

offset the amount of deflection

 $\operatorname{Technical} A \text{ppendix}$

Recommended Mounting Practices

Bends



Behringer recommends that supports and hangers be installed in close proximity to each change in direction of piping, with consideration of pipe movement due to thermal expansion and use of anchor and guide inserts to facilitate intended pipe movements.

Concentrated Loads



Behringer recommends that supports and hangers be installed as close as possible to any concentrated loads, such as valves, instrumentation, and other process components. It may be necessary to install on both sides of certain loads to reduce deflection and ensure proper continuous slope for drainability.

Thermal Expansion

- Anchoring systems should be designed to accommodate piping motion including thermal expansion.
- Proper selection and positioning of anchors and guides to facilitate thermal cycling of the piping with out causing structural damage or cause process components to misalign at mechanical joints.
- <u>Anchor</u> An anchor is a rigid device used to prevent all pipe displacement at the point of application. Anchors are
 used to fix selected points on a piping system in order to control forces, moments, and movement in each
 section of the total pipe run.
- <u>Guide</u> A guide is a device used to permit pipe movement in a predetermined direction while preventing undesirable movement in other directions. Guides are used to control piping movement, provide lateral pipe stability, control sway, and ensure proper alignment at expansion joints and loops. The guide allows free axial movement of the pipe/tube while maintaining proper alignment and elevation for drainability.
- Enlarging the ID dimension of the CH Series Polysulfone insert by .040" (Groups 1-5) and 0.050" (Groups 6-9) turns a gripping support "Anchor" into a "Guide". Behringer stocks both anchor and guide inserts for OD tube, pipe, and copper tube sizes. See part number configuration for more information. Guide inserts are also available for the Smooth Bore Series (See Fig. 207 in accessories)



Smooth Bore Inserts

General In	formation		Thermal Properties					
Plastic Insert Material	Part # Code	Color	Intermittent Exposure	Continuous Exposure				
Polypropylene	PP	Blue	-22° to + 212°F	-22° to + 194°F				
Santoprene	SP	Beige	(-30° to + 102°C) -40° lo + 302°F (-40° to + 150° C)	(-30° to + 90° C) -40° lo + 275°F (-40° to + 135°C)				
Polysulfone	PS	Black	-50° to + 320°F (-45° to + 160°C)	-50° to + 320°F (-45° to + 160°C)				
Zeotherm	ΖТ	Black	-40° to + 350°F (-40° to + 175°C)	-40° to + 300°F (-40° to + 150°C)				
High Density Polyethylene*	NN	White	-58° to + 180°F (-50° to + 82°C)	-58° to + 175°F (-50° to + 79°C)				
High Temp Nylon*	нт	Black	-40° lo + 350°F (-40° to + 177°C)	-40° lo + 260°F (-40° to + 127°C)				

^ NN & HT inserts available in group 8 & 9 sizes only

CH Series Inserts

General Information			Thermal Properties		
Plastic Insert Material	Part # Code	Color	Intermittent Exposure	Continuous Exposure	
Polysulfone	PS	Black	-50° lo + 320°F (-45° to + 160°C)	-50° lo + 320°F (-45° to + 160°C)	
Polysulfone	PG	Grey	-50° to + 320°F (-45° to + 160°C)	-50° to + 320°F (-45° to + 160°C)	

Chemical Properties	Resistant to a wide range of chemicals.
Mechanical Properties	Please contact Behringer for Product Data Sheets.


Metal Parts

> Surface finishing

In addition to the standard surface finish, alternative finishes are available on r





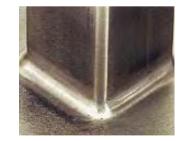

Mill Finish

Brushed


Blended Weld


Table 1 - Slope by Percentage (%) (most accurate)			Table 2 - Slope by Degrees (°) (second accurate)			Table 3 - Slope by inches/foot (least accurate)			oot
Percent (%)	Degrees (⁰)	inches/foot	Degrees (⁰)	Percent (%)	inches/foot	Inches/foot	decimal eq	Percent (%)	Degrees (⁰)
0.1	0.057	0.012	0.1	0.175	0.021	1/64	0.016	0.130	0.075
0.2	0.115	0.024	0.2	0.349	0.042	1/32	0.031	0.260	0.149
0.3	0.172	0.036	0.3	0.524	0.063	3/64	0.047	0.391	0.224
0.4	0.229	0.048	0.4	0.698	0.084	1/16	0.063	0.521	0.298
0.5	0.286	0.060	0.5	0.873	0.105	5/64	0.078	0.651	0.373
0.6	0.344	0.072	0.6	1.047	0.126	3/32	0.094	0.781	0.448
0.7	0.401	0.084	0.7	1.222	0.147	7/64	0.109	0.911	0.522
0.8	0.458	0.096	0.8	1.396	0.168	1/8	0.125	1.042	0.597
0.9	0.516	0.108	0.9	1.571	0.189	9/64	0.141	1.172	0.671
1.0	0.573	0.120	1.0	1.746	0.209	5/32	0.156	1.302	0.746
1.1	0.630	0.132	1.1	1.925	0.231	11/64	0.172	1.432	0.821
1.2	0.688	0.144	1.2	2.100	0.252	3/16	0.188	1.563	0.895
1.3	0.745	0.156	1.3	2.275	0.273	13/64	0.203	1.693	0.970
1.4	0.802	0.168	1.4	2,450	0.294	7/32	0.219	1.823	1.044
1.5	0.859	0.108	1.5	2.625	0,315	15/64	0.234	1.953	1,119
1.6	0.917	0.192	1.6	2.800	0.336	1/4	0.250	2.083	1.193
1.7	0.974	0.204	1.7	2.975	0.357	5/16	0.313	2.604	1.492
1.8	1.031	0.216	1.8	3.150	0.378	3/8	0.375	3.125	1.790
1.9	1.088	0.228	1.9	3.325	0.399	7/16	0.438	3.646	2.088
2.0	1.146	0.240	2.0	3.492	0.419	1/2	0.500	4.167	2.386

SLOPE CONVERSION CHART, SEAR FORCE DIAGRAM

(- Without Thermal Expansion Guide - Acorn Bolt Torque 7 Foot - Pounds

Note: Shear Force Testing was conducted under controlled conditions and with manufacturers recommended bolt torque. Actual Shear Forces may vary due to specific process conditions such as temperature, tube surface roughness, uneven load conditions and presence of line shock and/or vibration.

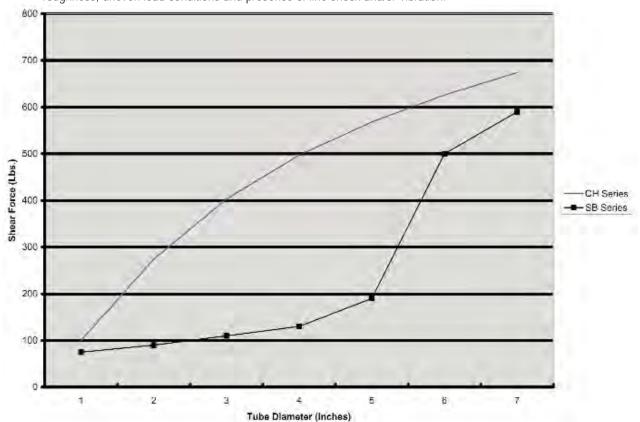

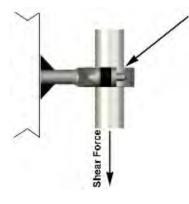

Materials, Material Properties, Technical Data

SPACING OF HANGERS

Hangers and/or supports shall be spaced as far apart as economically possible consideration to assure that the sag of the pipe between supports is within 1 permit drainage and also avoid excessive bending stresses from concentrated 1 valves and in>line equipment. Contractor shall use the maximum recommended sp between pipe support specified below. Spacing indicated below may differ from in MSS SP> 69. Additional hangers may be necessary to adequately support con loads such as valves, flanges, or instruments.

STEEL PIPE HANGER SPACING:

 PIPE SIZE (IN)
 MAXIMUM SPACING (FT)

 1/2" & 3/4"
 4

 1"
 5

 1>1/2" & 2"
 10

 3"
 12

 4" >16"
 16

COPPER TUBING HANGER SPACING (includes schedule 10 pipe):

TUBING SIZE (IN)	MAXIMUM SPACING (FT)
3/8" > 3/4"	б
1" > 1>1/4"	8
1> 1/2" > 3"	10
<u>4</u> " > 8"	12

STAINLESS STEEL SANITARY TUBING HANGER SPACING:

TUBING SIZE (IN)	MAXIMUM SPACING (FT)	
1/2" > 3/4"	4	
1 "	5	
1>1/2"	6	
2 "	8	
2>1/2 > 3"	10	
4 "	12	
6 "	14	
PLASTIC PIPING:		

Support in accordance with manufacturer s recommendations.



Also available from Behringer Corporation Industrial Pipe Clamps Standard Series Pipe Clamps Range: ½" OD to 4" OD 2,000 psi max. Heavy Series Pipe Clamps Range: ½" OD to 8" Pipe 5 000 psi max (Sindle plate)

Pressure: 5,000 psi max. (Single plate) 10,000 psi max. (Double plate)

Twin Series Pipe Clamps



Range:	
Pressure:	

¹⁄₄" OD to 1.66" OD 1,500 psi max.

Heavy 4 Series Pipe Clamps



Range: Pressure:

8" Pipe to 30" Pipe 5,000 psi max. (Single plate) 10,000 psi max. (Double plate)

